

The communications with PC are optionally done via USB connections.

Installing PDT into Cradle

CAUTION:

- 1.The Cradle can be used on horizontal surface only; it can't be used for wall mount.
- 2.This Cradle is not designed for use in a vehicle.

Charging Spare Battery Pack Note:

1. Both the PDT internal battery and a spare battery pack can be charged simultaneously.
2. The charging LED indicator will show the charging status of the spare battery pack.
3. To ensure proper operation of the PDT in the cradle, hold it at a forward angle while inserting, and then tilt it backwards into the resting position, as shown in the picture.

