 




1	Soft key 1	Performs the command shown in the label above the button
2	QWERTY keyboard	A hardware keyboard similar to a standard one on your PC
3	Soft key 2	Performs the command shown in the label above the button
4	Scan key (Left)	Press the key to scan and decode bar code/2D code
5	Record key	Press and hold this key to record a voice note
6	Volume up	Press the Volume up button to turn up the PDA receiver volume
7	Volume down	Press the Volume down button to turn down the PDA receiver volume
8	RESET button	Press the RESET button with stylus to soft-reset your device
9	Eyelet for wrist strap(Left)	Fix a wrist strap here
10	Stylus	Write, draw, or make selection on the touch screen
11	Scanner	Point the reading window of the scanner in the direction of bar code/ 2D code
12	Power button	Power on or off the device
13	Wi-Fi/Bluetooth LED	Indicates Wi-Fi/Bluetooth Status
14	Telephone receiver	Listen to a phone call here
15	GSM/Battery LED	Indicates GSM/Battery LED
16	Display	2.8-inch TFT LCD with touch screen
17	Soft key 3	Performs the command shown in the label above the button
18	Soft key 4	Performs the command shown in the label above the button
19	Start key	Pull down the Start menu
20	OK key	Press OK key to make a selection
21	Talk key	Press this key to dial or answer a call
22	5-way navigation key	Press this button up, down, left, or right to move through menus; carry out the selection by pressing the center button.
23	End key	End a call or close Phone application
24	Speaker	Listen to audio media or listen to a phone call hands-free
25	Battery pack	Remove to place battery and SIM card
26	Microphone	Speak into the microphone when talking on the phone or recording a voice note
27	Scan key(Right)	Press the key to scan and decode bar code/ 2D code
28	Eyelet for wrist strap(Right)	Fix a wrist strap here
29	Mini-SD card slot	Insert a mini-SD card to expand device memory
30	Mini USB connector	Mini USB connector for PC sync and battery charging
31	Earphone Jack	Connect a 2.5 mm Earphone

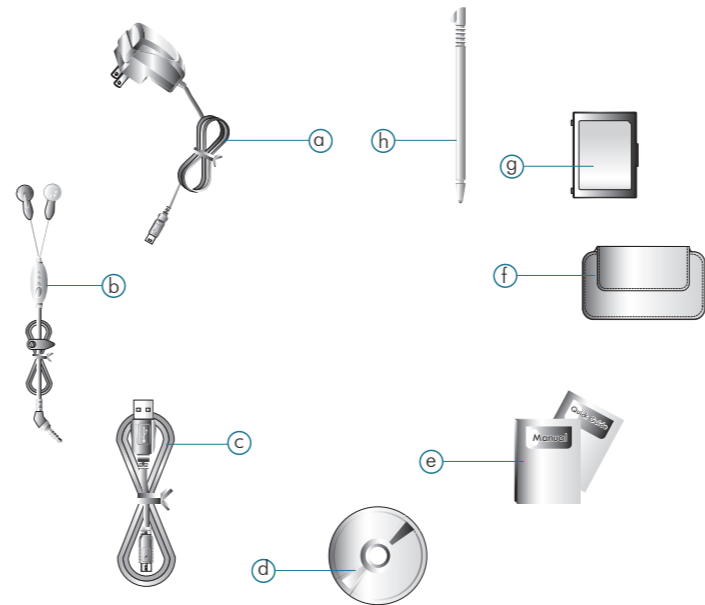

a	AC Adapter	Recharge the device battery
b	Stereo Headset	Listen to a phone conversation hands-free
c	USB Cable	Connect the device to a PC
d	Getting Started CD	Windows Mobile™ Getting Started Disc
e	User Manual/Quick Guide	Provide instructions of device functions
f	Pouch	Protect the device
g	Battery	Rechargeable Li-ion polymer battery
h	Stylus	Write, draw, or make selection on the touch screen


To enter capital letters/numbers, or to delete/backspace by using the hardware keyboard:

	The “Fn” key is used to access the symbols in blue on the keypad. Press this key once and the  icon appears; the next character you enter will be a symbol or number (for example: @abc). Press the “Fn” key twice can enter numbers and symbols constantly (for example: \$25). You can also hold down the “Fn” key and press another key at the same time to enter its corresponding symbol.
	Press this key once, the next character you enter will be a capital letter (for example: Abc). Hold down this key and press another key at the same time to enter capital letters constantly. Alternatively, you can press the “Fn” key once and then press this key (  appears) to enter capital letters constantly. For returning to enter lowercase letters, press the “Fn” key and then the “Cap” key.
	Press this key to erase the letter in the left side of the cursor. Press the “Fn” key once (  appears) then press this key to delete the first letter in the right side of the cursor. To disable the “Fn” key, press it again (  will disappear).
	You can press this key to enter symbols or special characters such as accented letters (e.g. à, é...etc.). After pressing a character, press the “Fn” key and then the “Sym” key once to show an accent type of this character. To show another accent type, repeat the same steps until the desired type is displayed. See page 27 in the user manual for corresponding symbols for each character/key.

Installing the SIM Card


If you want to use phone features, you must install a GSM SIM card.

 - Push upper corners and slide down the battery cover to remove it.
- Place the SIM card in the SIM card slot with the gold contacts facing down. The SIM card’s cut-off corner should match the cut-off corner in the SIM card slot.

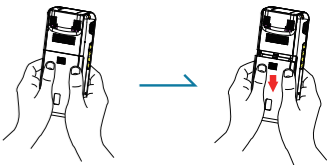

Installing the Battery

 - Press the battery down forcefully into the battery slot and close the back cover.

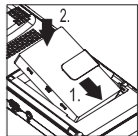



ActiveSync synchronizes information on your phone with information on your PC such as Outlook content. ActiveSync can also synchronize over a wireless or cellular network with Exchange Server, if your company or service provider is running Exchange Server with Exchange ActiveSync.

Specifically, you can use ActiveSync to:

- Synchronize information such as Outlook e-mail, contacts, calendar, or tasks information on your phone with your PC, as well as pictures, video, and music.
- Synchronize Outlook e-mail, contacts, calendar appointments, and tasks on your phone directly with Exchange Server so that you can stay up to date even when your PC is turned off.
- Copy files between your phone and your PC without synchronizing.
- Select which types of information are synchronized and specify how much information is synchronized. For example, you can choose how many weeks of past calendar appointments to synchronize.

Installing and setting up ActiveSync

1. Install ActiveSync on your PC, as described on the Windows Mobile™ Getting Started Disc. After Setup completes, the Synchronization Setup Wizard automatically starts when you connect your device to the PC.
2. Follow the instructions on the screen to complete the wizard. In the Sync Setup Wizard, you can:
  - Create a synchronization relationship between your PC and the device.
  - Configure an Exchange Server connection to synchronize directly with Exchange Server. To synchronize your device with Exchange Server, obtain the name of the Exchange Server, your user name, password, and domain name from your administrator before completing the wizard.
  - Choose information types to synchronize.

6061B0230401



You can use your phone to make, receive, and keep track of calls, and send text messages (SMS, Short Message Service) and MMS (Multimedia Messaging Service) messages. You can also dial a phone number directly from Contacts, and easily copy SIM contacts to Contacts on the phone.

The Phone Screen

From the Phone screen, you can open, call, or find a contact, and even save a new number in Contacts. To access the Phone screen, do any of the following:

- Press the Talk key ( ).
- Tap > **Phone**.

Making a Call from Contacts

1. On the Phone screen, tap **Contacts**.
2. Tap the desired contact and tap **Call** or press the TALK Key to dial.

Making a Call from Call History

Call History displays calls you have made, received, and missed.

1. On the Phone screen, tap the **Call History** button on the Phone keypad.
2. Select the name or phone number to call.
3. Tap Call or press the TALK key.



 
Call History

- 1.Calls you received
- 2.Calls you made
- 3.Calls you missed



Powering On/Off the Device

Press the POWER button to turn on the device. The POWER button is located on the top side of the device. When you power on the device for the first time, you are asked to calibrate the device. Please refer to the “Calibrating your device” section in the user manual for calibration steps. Press the POWER button again to switch the device to sleep mode. You can still receive phone calls and messages when the device is operating on sleep mode. To power off the device completely, press and hold the POWER button for 3 seconds and the system will prompt you to power off the device.

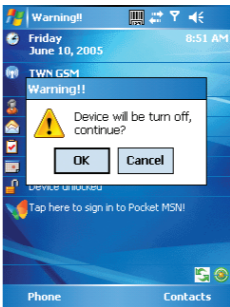

Icon Indicators

Status indicators appear at the top of the screen and on the Today screen. The following table lists common status indicators and their meanings.

	New e-mail or text message (SMS)		Connection is not active
	New voice mail		Synchronization in progress
	New instant message		Ringer on
	Voice call		Ringer off
	Voice call in progress		Roaming
	Data call in progress		No Voice mail
	Calls are forwarded		Voice mail Lines 1
	Call on hold		Call Forwarding Lines 1
	Missed call		Alarm
	Battery level 1		GPRS available
	Battery level 2		GRPS in use
	Low battery		No SIM card installed
	Extremely low battery		EDGE available
	Battery charging		EDGE in use
	Signal strength		Wi-Fi connection in progress
	Bluetooth bonding in progress		Ringer in vibration mode
	No signal		Function key on
	Flight mode		Synchronization error
	No service		Barcode reader off
	PC Connection is active		Barcode reader on

