

Introduction

- Read this quick start guide carefully before installing or/and using the cradle.
- Keep this quick start guide for future reference and store in a safe place.

CAUTION

- This quick start guide may be revised or withdrawn at any time without prior notice.
- This quick start guide may not, in whole or in part, be copied, photocopied, reproduced, translated or converted to any electronic or machine readable form without prior written consent of Opticon.
- Trademarks used are property of their respective owners.
- Under no circumstances shall Opticon be held responsible for any special, incidental, consequential or indirect damages howsoever caused.

⚠ Handling Instructions


- The H19 Vehicle Cradle is a designated vehicle mount cradle for the H19 smartphone portable terminal.
- Determine the best position of the cradle and ensure it does not obstruct your vehicle controls.
- Position the cradle taking in consideration the driver field of view and does not obstruct the driver's view.
- Place the H19 cradle to ensure proper ventilation around the device.
- Do not operate the unit while driving.
- Any modification to the mounting pedestal not expressly approved by Opticon could void the user's authority to operate the equipment.
- Do not install the vehicle cradle over an air bag cover or within the air bag deployment zone.
- Attach the pedestal suction cup onto a smooth surface like the glass windshield. (Clean the mounting surface before attaching the base of the cradle)

Overview

The H19 Vehicle Cradle consists of 3 major sections: cradle section, arm section and a cable. The following two tables show the physical features of the cradle section and the arm section.


Cradle Section

Dimensions	(H) 95 × (W) 69 × (D) 48 mm Max (H) 3.74 × (W) 2.72 × (D) 1.89 in. Max
Weight	60 g (2.12 oz / 0.13 lb)

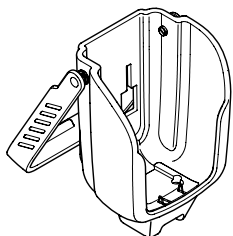

Arm Section

Dimensions	(H) 125 × (W) 80 × (D) 80 mm Max (H) 4.92 × (W) 3.15 × (D) 3.15 in. Max
Weight	120 g (4.32 oz / 0.26 lb)

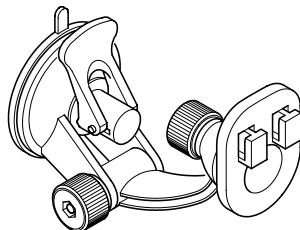


Accessories & Optional Parts

Optional Parts	A pedestal suction cup available
-----------------------	----------------------------------

Using the Cradle


STEP 1-1

Insert the H19 into the Vehicle Cradle as shown.

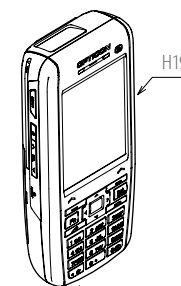

STEP 1-2


Rotate the restraining bracket over the top of the H19.

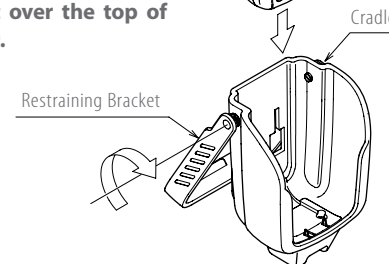

STEP 1

STEP 1-3

Firmly slide the cradle onto the arm until it clicks.

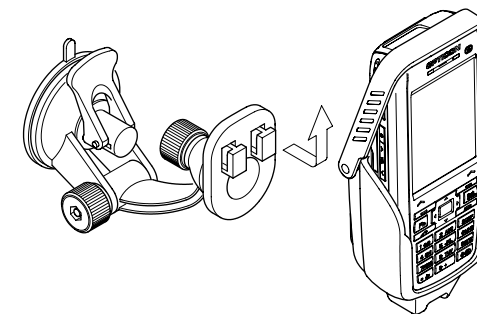

Please attach the Vehicle Cradle onto a smooth surface like the glass windshield. (Be sure to clean the mounting surface before attaching the base of the Vehicle Cradle.)

STEP 2-1


With the Vehicle Cradle oriented as shown in the diagram, firmly press the base of the Vehicle Cradle against the mounting surface.

STEP 2-2

Rotate the activating lever upward as indicated in the diagram.

STEP 2-3

Adjust the height or the angle of the Vehicle Cradle using the knobs as shown in the diagram.

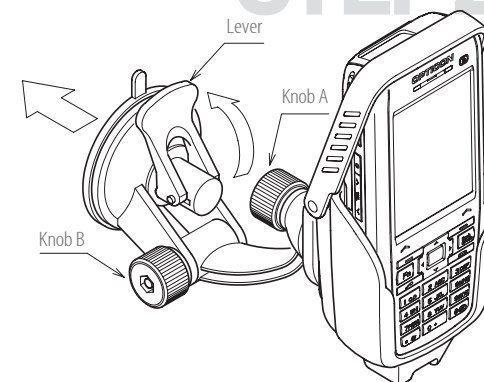

STEP 2

Contact

Please contact Opticon or your local dealer.

The Netherlands	Opticon Sensors Europe B.V. tel: +31 (0)23-5692700 / email: sales@opticon.com	Sweden	Opticon Sensors Nordic AB tel: +46 (0)8-58548560 / email: henrik@opticon-sensors.se
U.S.A.	Opticon Inc. tel: 800-636-0090 / email: opticon@opticonUSA.com	United Kingdom	Opticon Limited tel: +44 (0)1582-635100 / email: sales@opticon.co.uk
France	Opticon S.A.S. tel: +33 (0)1-41461260 / email: opticon@opticon.fr	Taiwan	Opticon Far Eastern Ltd. tel: +886 2-27597444 / email: taiwan@opticon.com
Germany	Opticon Sensoren GmbH tel: +49 (0)6074-91890-0 / email: sales.de@opticon.com	China	Opticon Sensors Europe B.V., Shanghai Representative Office tel: +86 21-64480881 / email: china@opticon.com
Italy	Opticon s.r.l. tel: +39 (0)051-6321800 / email: opticon@opticonitalia.it	Australia	Opticon Sensors Pty. Ltd. tel: +61 (0)2-43402666 / email: sales@opticon.com.au
Spain	Opticon Sensores S.L. tel: +34 (0)902-747469 / email: info@opticon.es	Brazil	Opticon Sensors Europe B.V., Latin American Office tel: +55 11-8322 2244 / email: sales.la@opticon.com