

CHG-250

Quick Start Guide

≡ OPTICON



What is in the box

- Single-slot CHG-250 charging cradle for the L-250BT
- Metal base plate / mounting plate
- Screws (x3)

* No USB-C cable is included with the cradle. Please use the USB-C cable provided with the scanner.

Charging instructions

Place the L-250BT in the cradle as indicated. The cradle uses magnets to help the scanner “snap” into place.

If the cradle is powered, the charging LED indicator on the scanner will confirm that charging started successfully.

- Green = fully charged
- Orange (fast pulse) = quick charge (1A) *
- Orange (slow pulse) = normal charge (500mA) **
- Red (blinking) = charging error


* when the USB cable is connected to a quick charger

** when the USB cable is connected to a PC or a 500mA charger

Mounting instructions

Installation steps:


1. Insert the USB-C cable supplied with the L-250BT (or another compatible USB-C cable) into the designated port on the back of the cradle. Route the cable through the designated cable guides.

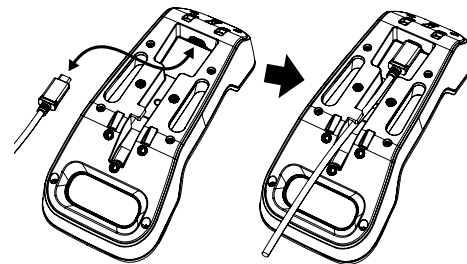


2. Attach the base plate to the cradle by using the provided screws.

≡ OPTICON


Use the 2 center screw holes to have the cradle in a horizontal position.

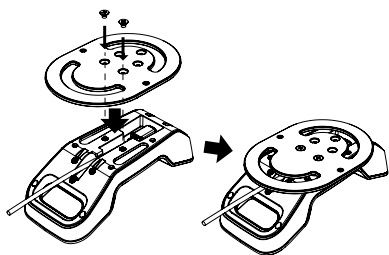

Use the 3 off-center screw holes (arranged in a triangle) to have the cradle in a vertical standing position.

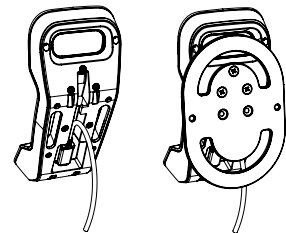

- Use the holes indicated by "a" for horizontal surface mounting.
- Use the holes indicated by "b" for vertical surface mounting.
- Use the holes indicated by "c" for wall mounting.

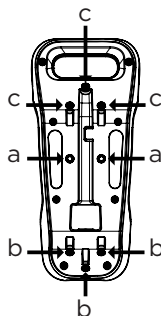

- Scanner: horizontal
Surface: horizontal
- Scanner: vertical
Surface: horizontal
- Scanner: vertical
Surface: vertical



- Place the cradle on a flat, stable horizontal surface or secure the cradle to a wall using two screws (not provided).
- Connect the USB cable to a charging adapter or PC.
- Insert the scanner into the cradle and verify proper charging.

Documentation

Documentation for the CHG-250 are available at: www.opticon.com

Opticon Sensors Europe BV
Opaallaan 35, 2132 XV Hoofddorp, the Netherlands.

© Copyright Opticon. All rights reserved. This information is subject to change without prior notice.

For availability, contact your local representative.